

**To view current cycle and remaining time, press any button.**

Allows the operator to view the actual pressure input and scroll through the pneumatic set points.


Press to manually open the valve.

Allows the operator to set/read the open time period.  
\* See Note

Allows the operator to set/read the after flow time period.  
\*See Note

Allows the operator to read or set up to six options.  
See below for a list of options.

Used to Change all Settings.

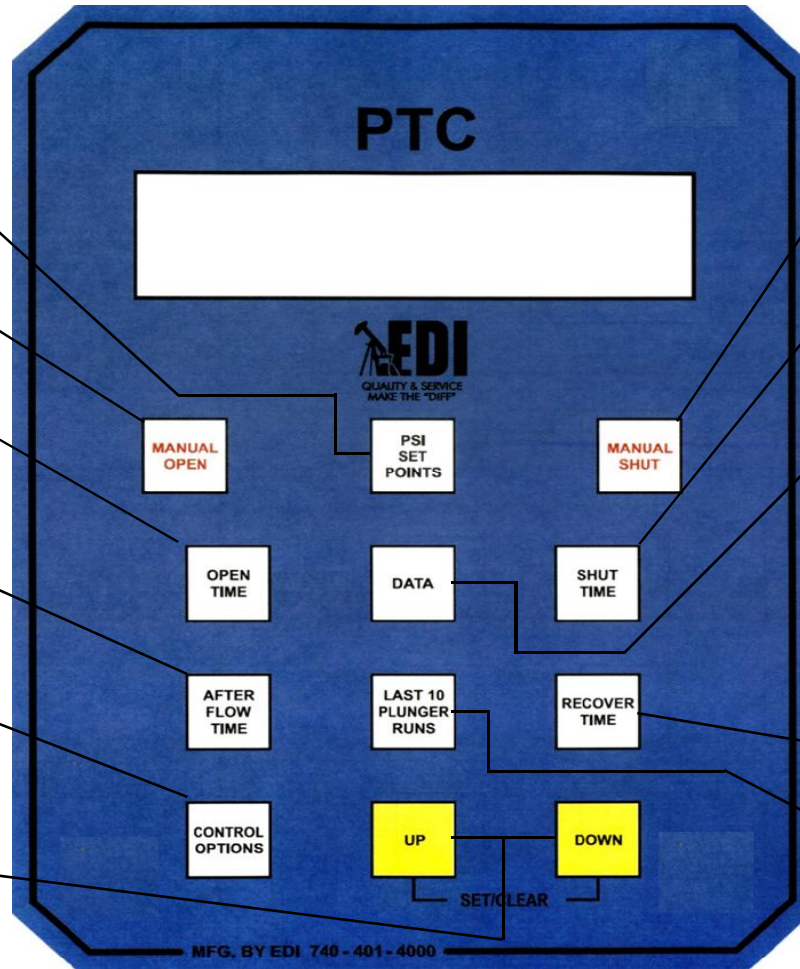

Press to manually shut the valve.

Allows the operator to set/read the shut time period.  
\*See Note

Allows the operator to scroll through data each time the button is pressed. Data will appear in this order: Plunger Arrival Count, Plunger Failure Count, Total Open Time, Battery Voltage, Hi Count, and Lo Count. To clear the plunger arrival count, plunger failure count, total open time, hi count and lo count, the operator, while holding this button, can press the "Up" or "Down" buttons, and the displayed value will be cleared to zero.

Allows the operator to set/read the recovery time period.  
\*See Note

Allows the operator to display the last 10 plunger travel times.

All options are factory set at EDI for normal time cycling.

	Normal Factory Settings	Altered
1	Ignore Fall Time	Use Fall Time
2	Normal Timing	Sequential Timing
3	Use Pressure	Ignore Pressure
4	Ignore Shut In	Use Shut In
5	Hi Open/Lo Close	Hi/Lo Close
6	Continuous Cycle	Stopped Cycle

\* NOTE: When any one of the time period buttons are pressed and held, the **Up** or **Down** buttons may be used to alter the time period to any value.