


There are two limit and three operation buttons. The two limit buttons allow the operator to display or set high/low limits.

Allows the operator to set/read the high limit. Manual open on high pressure, use UP and HIGH buttons to open valve when high pressure is present.

Allows the operator to set/change all settings.

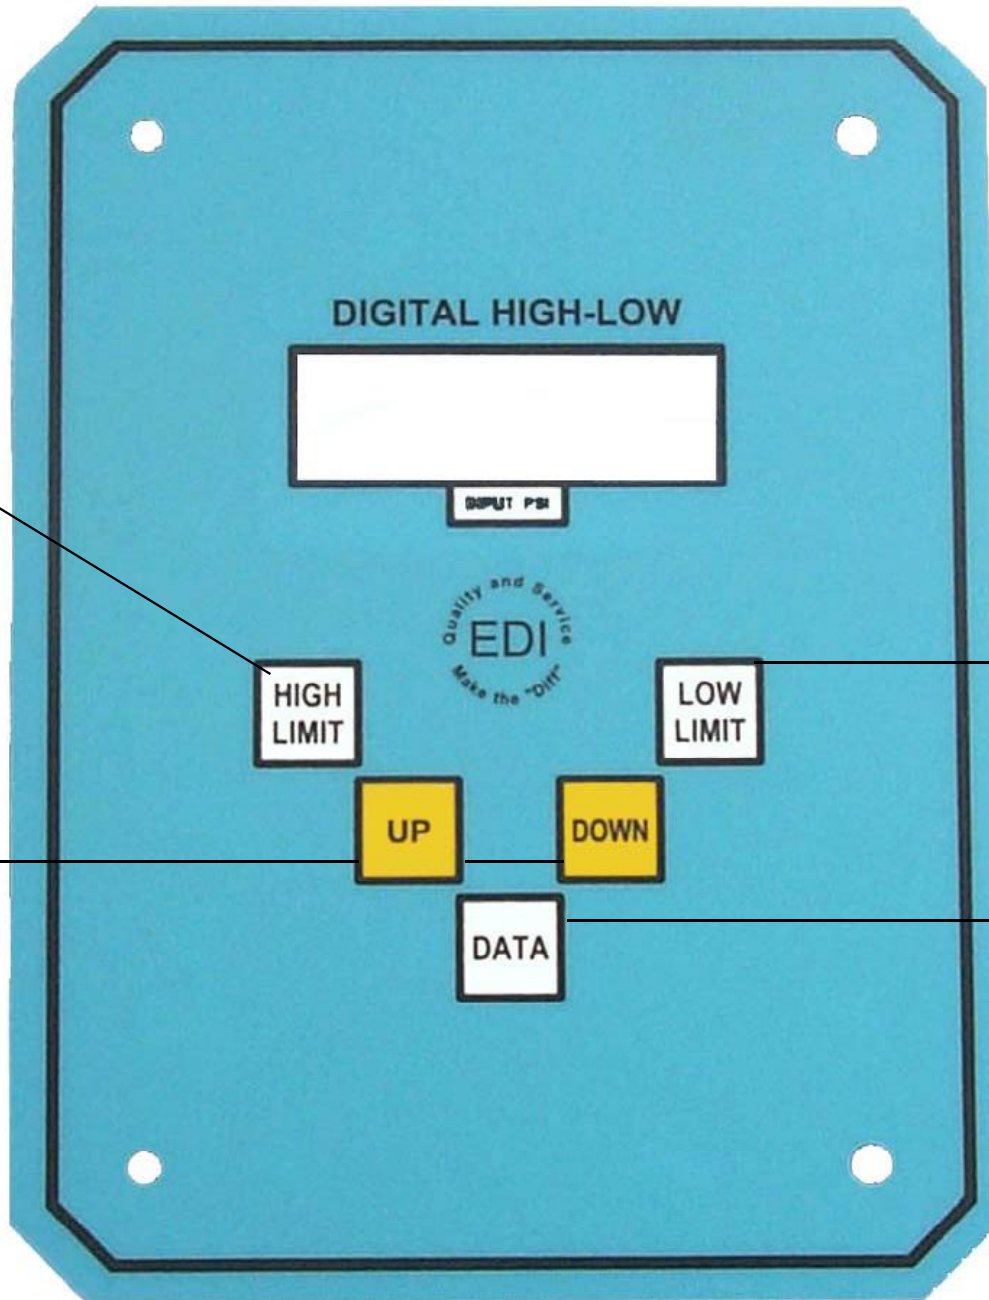

Allows the operator to set/read the low limit.

Scroll through the data button to read **High Count, **Low Count**, and **Battery Voltage**.**